


1. Product Outline

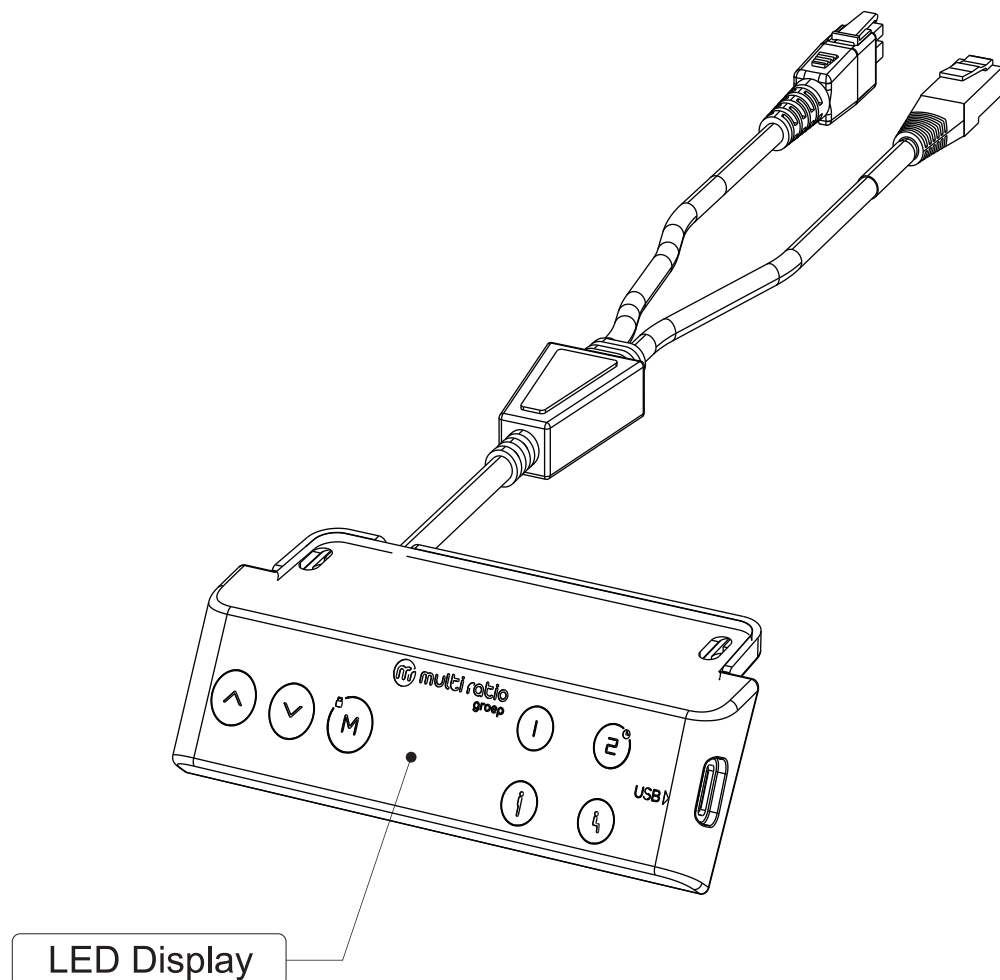

2. Product Specification

Button introduction: There are 7 buttons that "▲", "▼", "M", "1", "2", "3", "4"

- (1) "▲" : Up button, used to adjust the height of the desk to move upward.
- (2) "▼" : Down button, used to adjust the height of the desk to move downward.
- (3) "1" : Position 1, the user's saved first height position.
- (4) "2" : Position 2, the user's saved second height position.
- (5) "3" : Position 3, The display displays the number 3, the user's saved standing height position
- (6) "4" : Position 4, The display displays the number 4, the user's saved sitting height position
- (7) "M" : Height saving button, for height memory function; Child lock:for security

3: Operating Instructions

- Child lock function:
 - a. To unlock or start the child lock, you need to press and hold the M button for about 5 seconds.
 - b. When the child lock is turned on, the child lock blue indicator light ("▼" and M directly above) lights up
 - c. Only when the child lock is unlocked, all the buttons can work normally.
- Height Adjustable Function:

Press the "▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
 - a. Press "▲" or "▼" button and adjust the table to the desired height. Press "M" to save the height, and the screen will display "5-"; Press "1", "2" or "3", "4" to save the height to the corresponding position 1 2 3 or 4, this time the display screen will show as "5-1", "5-2", or "5-3", or "5-4";
 - b. Press "1", "2" and "3", "4" button to automatically adjust the height you saved.
- USB C charging function :
 - a. USB output: PD3.0, 5V 3A/9V 2.2A/12V 1.67A, ±5%
- Anti-collision sensitivity adjustment:
 - a. Press and hold the "▲" and "▼" button for 5 seconds at the same time to switch the sensitivity. Switch one file for 1 time and divide it into 4 files (A-0, A-1, A-2, A-3);
 - b. The display shows "A-0", anti-collision function is off; "A-1", low sensitivity; "A-2", medium sensitivity; "A-3", high sensitivity;
 - c. During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage;
 - d. Press and hold the "▲" and "▼" button for 5 seconds at the same time. If the display does not display the above codes, there is no anti-collision function.

● Sedentary Alarm Function:

- a. Press and hold button "2" for more than 3 seconds to activate the function. The LED display shows "00" or "00".
- b. Two seconds later, press the "▲" or "▼" button to adjust the reminder time only when the display screen flashes.
The default time of the reminder is 45 minutes, which is shown as "45".
Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, display screen will show "00" the buzzer will be active with a tone of "di...di...di" for 10 seconds.
- c. Within the 10-second reminder buzz, press any button to reactivate the time countdown.
If no buttons are pressed during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. If no buttons are pressed during the second buzz, the sedentary alarm function will turn off automatically.
- d. Press and hold the "2" button for more than 8 seconds to turn off the sedentary alarm function. The LED display shows "FF" or "FF".

● Modify minimum height on the display



- When the height value displayed on the standing desk does not match the actual height value, you can modify the display minimum height to adjust.
- a. Long press "M + ▲" for 3 seconds to enter the state of displaying the minimum altitude modification.
 - b. The current displayed height value is flashing on the LED. Press the up button to increase the value, which means how much the minimum height is increased, and press the "▼" to decrease the value, which means how much the minimum height is lowered. After the adjustment is completed, short press the "M" key to confirm. At this time, the buzzer will beep twice to remind the user, indicating that the minimum height of the display is successfully modified.
 - c. You can repeat the modification according to the above two steps.

● Set the lower limit height and upper limit height of standing desk operation

- a. Set the lower limit height
Adjust the standing desk to the desired height, long press "M+1" button for 3 seconds to set the current position as the lower limit of operation height. When the setting is successful, the buzzer will beep twice. After the setting is completed, the standing desk will not be able to adjust to a position lower than the lower limit height. Please note that the lower limit height should not exceed 800 mm, otherwise it may result in unsuccessful reset.
- b. Set the upper limit height
Adjust the standing desk to the desired height, long press "M+2" button for 3 seconds to set the current position to the highest height of the lifting column. When the setting is successful, the buzzer will beep twice. After the setting is completed, the standing desk will not be able to adjust to a position higher than the upper limit height.
- c. Clear the lower limit height and upper limit height
Long press "M+ ▼" for 3 seconds to clear the lower limit height and upper limit height. When the setting is successful, the buzzer will beep twice.

● Troubleshooting:

- a. Reset: When the screen shows "RSt" or "rSt", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- b. When it doesn't work and the screen shows "E01" or "E02", please retry 18 minutes later.
- c. If the "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button to start the reset process when it shows the "RSt" or "rSt".
- d. If all these above process are inefficient, please contact our customer service.

Waste disposal		
This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.		



Multi Ratio B.V.
Plakhorstweg 46, 7008 AT Doetinchem
T: 0314 - 399 088
E: info@multiratio.nl